


## **MBI Crane & Hoist**


**Material Handling Products and Services** 




## **VARIOUS MANUFACTURERS**

## Aerial Lift - Baker - Dur-A-Lift - Hunt-Pierce - Skyworker

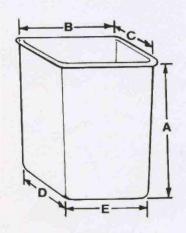

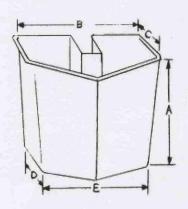

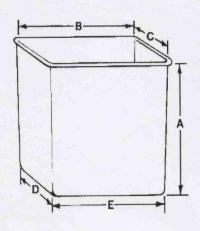

A is measured from the bottom of the rim to the base of the insert. B & C measurements are taken one inch down from beneath the lip, on the outside of the insert.

D & E measurements are taken three inches up from the bottom, on the outside of the insert. This eliminates distortion due to the radius of the corners.

NOTE: All dimensions shown in chart below refer to the OUT-SIDE of the insert, or INSIDE of the bucket. All measurements are rounded to the nearest half-inch.

PTI MODEL#	MFG'S CODE	SHAPE	DIMENSIONS IN INCHES					NO. PER BOX	PTI ACCESSORY ITEMS		
			A	В	C	D	E	7	LIDS	SCUFF PADS	SCUFF PADS W/STEP
A-03	Aerial Lift	Square	39	24	24	22	22	3	2L28	D-21	DS-27
B-50	Baker	Kidney	42	54	25	23.5	52	1			
BU-59	Baker	Square	39	23.5	23.5	20	20	4	2L28	D-19	DS-15
C-03	Skyworker	Square	39	24	24	22	22	3	2L28	D-21	DS-27
C-04	Skyworker	Square	39	24	24	22.5	22.5	3	2L28	D-22	DS-17
DL-42	Dur-A-Lift	Square	42	24	24	21	21	4	2L28	D-20	DS-1
DL-42S	Dur-A-Lift	Square	42	24	24	21	21	4	2L28	D-20-N	DS-1
U-59	Hunt-Pierce	Square	39	23.5	23.5	20	20	4	2L28	D-19	DS-15

S = Insert with Molded Step